


How Do I Deactivate My Software

If you want to make changes to your computer that could potentially affect your registration or move the software to another computer, deactivate it first. To do this, follow these simple steps.


1. Open your Digimoto software.

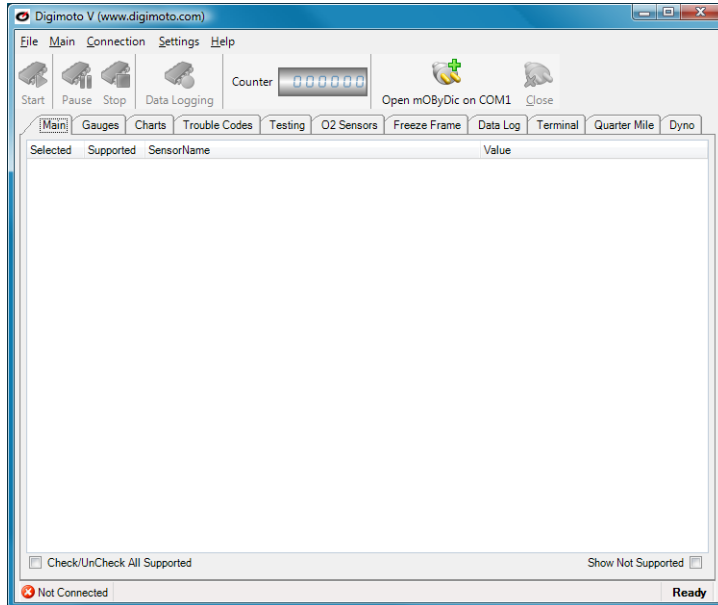


2. Click **HELP** at the top.
3. Click **ABOUT** on the pull out menu. You will get this screen.




4. Click **DEACTIVTE**. This screen opens up.

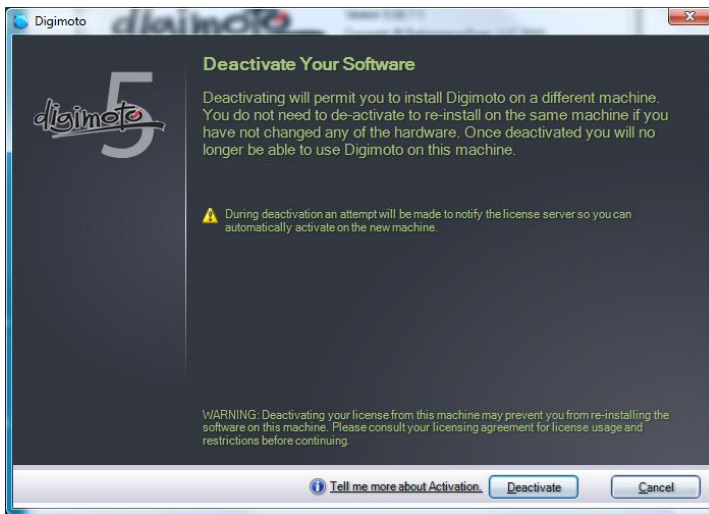

5. Click **DEACTIVATE** again. This screen will appear while the software deactivates.

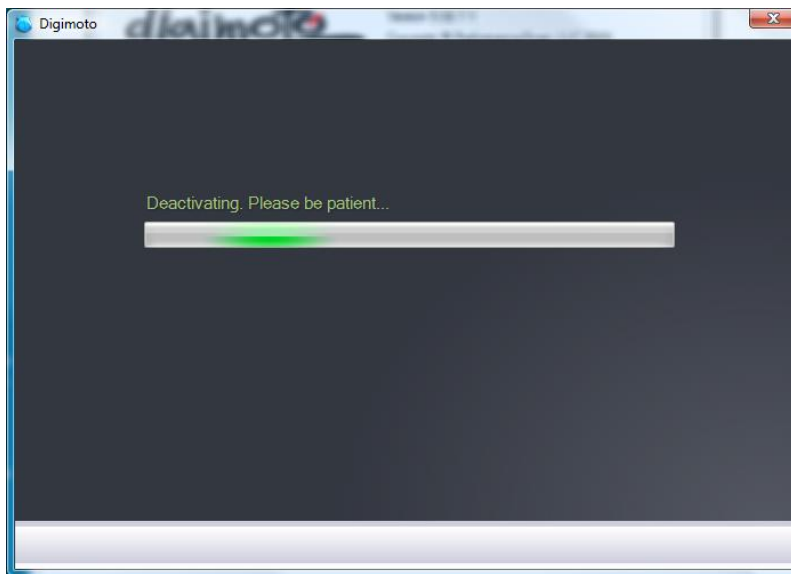

6. After it successfully deactivates, this message will appear.

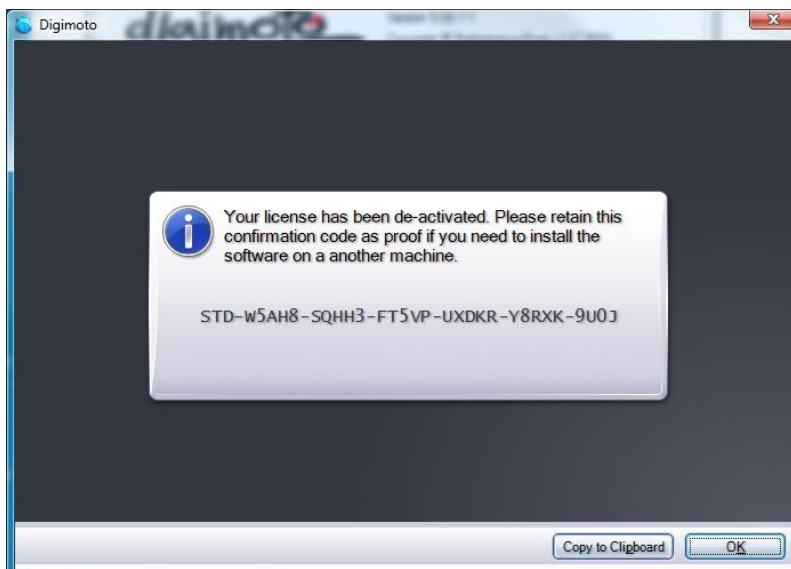

7. You are now ready to register on another computer or make upgrades to your current computer.