



HOW TO DATA LOG

- 1) Once Digimoto is connected following the direction for “Beginning to Use Digimoto 5” you will be at this screen.

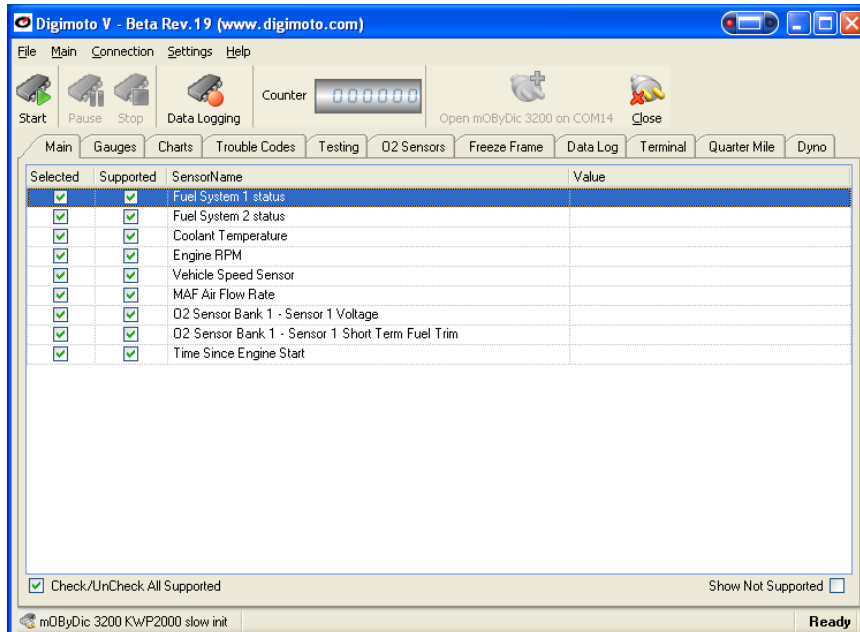


- 2) Click the **Data Logging** button at the top, you should begin to see sensor readings.

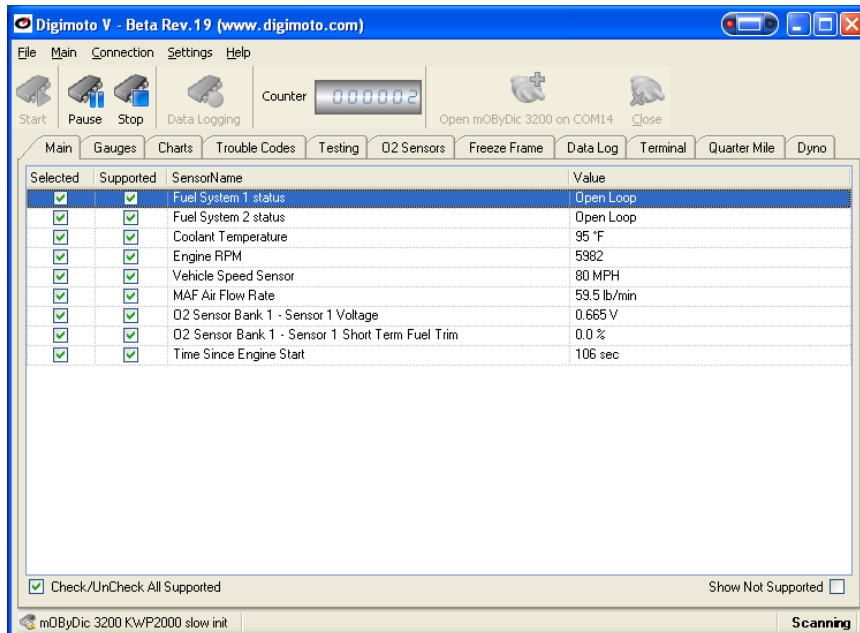


- 3) You may now move between the **Main**, **Gauges**, and **Charts** screens. Any other tab will pause the sensor readings. Clicking on unsupported items on any of these screens will throw an error like the one below. Click

the button **Remove** to stop trying to read the unsupported item.

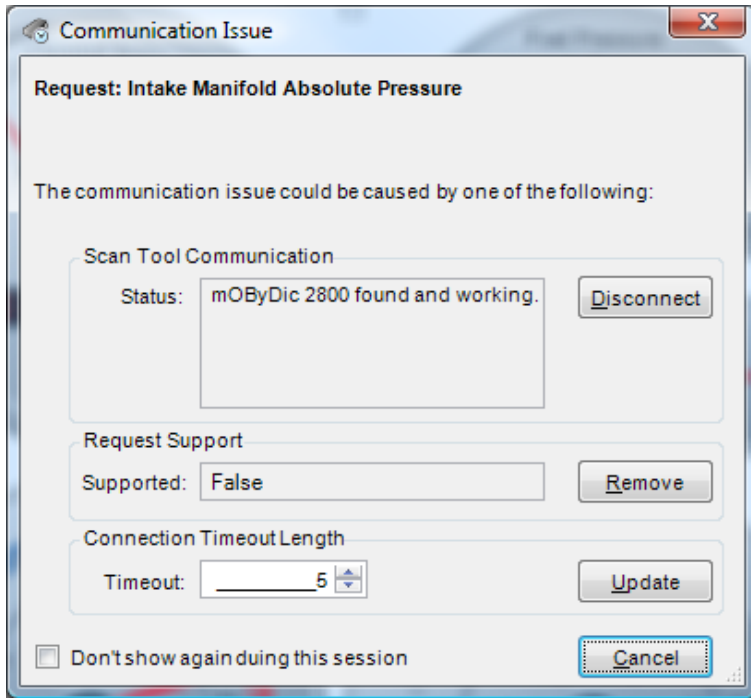

- 4) When you are finished logging data, click the **Stop** button at the top of the main screen. Then click the **Data Log** tab to view your log.

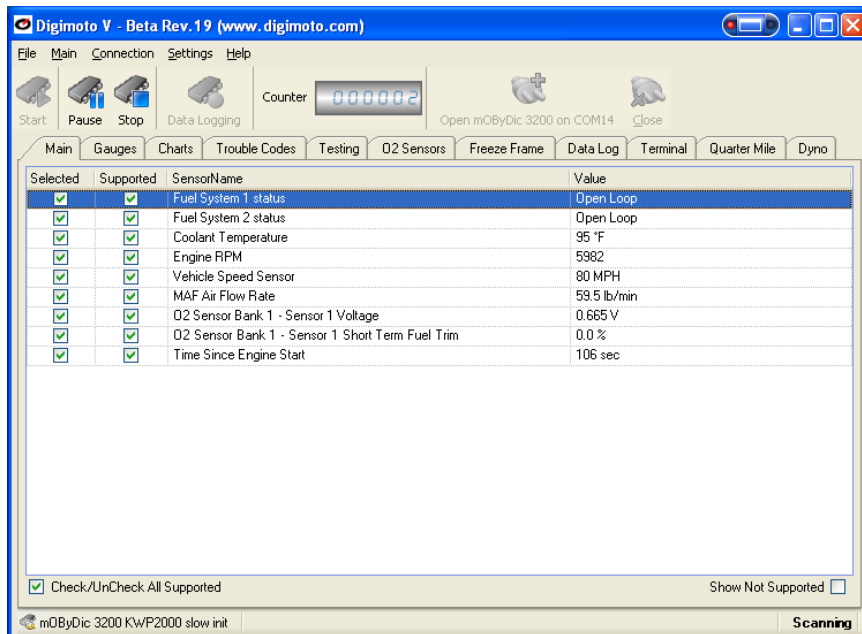

5) From here you may view, **Clear Log**, or **Save Log**. You may also start here and use the **Log Direct to File** and then follow steps 1 to 4.

Drag a column header here to group by that column.

Query	Value	Metric	TimeStamp
ECT	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:08 AM
RPM	2010	<input checked="" type="checkbox"/>	9/19/2008 11:18:08 AM
VSS	175	<input checked="" type="checkbox"/>	9/19/2008 11:18:08 AM
MAF	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:09 AM
O2S11	0.945	<input checked="" type="checkbox"/>	9/19/2008 11:18:09 AM
SHRTFT11	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:09 AM
RUNTM	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:09 AM
ECT	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:09 AM
RPM	2016	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
VSS	175	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
MAF	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
O2S11	0.945	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
SHRTFT11	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
RUNTM	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:10 AM
ECT	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:11 AM
RPM	2010	<input checked="" type="checkbox"/>	9/19/2008 11:18:11 AM
VSS	175	<input checked="" type="checkbox"/>	9/19/2008 11:18:11 AM
MAF	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:11 AM
O2S11	0.945	<input checked="" type="checkbox"/>	9/19/2008 11:18:12 AM
SHRTFT11	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:12 AM
RUNTM	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:12 AM
ECT	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:12 AM
RPM	2010	<input checked="" type="checkbox"/>	9/19/2008 11:18:12 AM
VSS	175	<input checked="" type="checkbox"/>	9/19/2008 11:18:13 AM
MAF	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:13 AM
O2S11	0.945	<input checked="" type="checkbox"/>	9/19/2008 11:18:13 AM
SHRTFT11	0	<input checked="" type="checkbox"/>	9/19/2008 11:18:13 AM
RUNTM	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:13 AM
ECT	106	<input checked="" type="checkbox"/>	9/19/2008 11:18:14 AM

Log Direct To File

TimeStamp:

mOByDic 2800 KWP2000 fast init Ready